

**Recall of AV Receiver's factory settings using initial reset function.**

**Attention:**

**By activating the reset function, all settings will get lost and need to be done again. Also, the YPAO automatic sound calibration needs to be done again.**

To activate the factory settings of your AV receiver, you need to enter the Advanced Setup function and the INIT-ALL mode.

Please follow this guide to activate the factory reset.

1. Switch off your Yamaha Receiver by using the „Power ON / OFF” key.



2. Push and hold the „Straight“ key and power on the unit by pushing the „Power ON / OFF“ key.



RX-Vxxx



RX-Axxx

3. Push the key „Program >“, repeatedly until „INIT“ or „INITALIZE“ is shown in the Receiver’s front display.



RX-Vxxx



RX-Axxx

4. Push the „straight“ key repeatedly until lettering has changed to:

RX-Vxxx: INIT..... ALL

RX-Axxx: INITIALIZE ALL

5. Power off the receiver by using the „POWER ON / OFF“ key. Now the reset will be executed.

#reset; #factory; #Reset; #initialise; #initialize